

**501-11, checking for endstop problem:**

If the table frame is all the way to the top and wont move down or the table frame will only move up but not down, it might be caused by problems with the electrical endstop. Please follow the instructions below.

**1. Metal plate activating endstop.**

If this metal plate has been pressed down it will activate the endstop. Try to bend it up again with a screwdriver or similar and run the table down.

**Left leg shown**



**2. Endstop activated false by tooth rack.**

Tooth rack  
Endstop switch arm

**Left leg shown**



If the endstop switch arm touches the tooth rack it is false activated. Press the endstop switch arm down with a screwdriver or similar.